

TECHNICAL SPECIFICATIONS	
Model	MTH8
Rated Power	2000W max
Rated Frequency	50Hz
Voltage	220-240V a.c.

Warranty

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Arlec Australia Pty. Ltd. ACN 009 322 105 ("Arlec") gives the Warranty.
Arlec's telephone number, address and email address are:

Customer Service: (03) 9982 5111


Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130
Email: custservice@arlec.com.au

CPIN002608/2



2000 Watt MICATHERMIC HEATER

MTH8

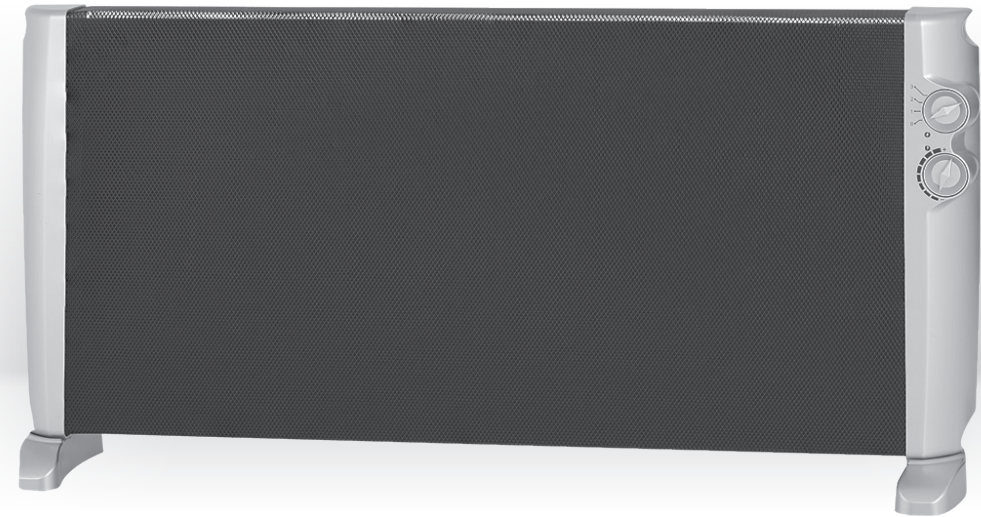

User Manual

FOR PERSONAL INDOOR USE ONLY
Keep this manual in a safe place for future reference

WARNING! To reduce the risk of fire, electric shock, or personal injury, read, understand and follow instructions before using this heater.

IMPORTANT SAFEGUARDS

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible material such as drapery and other furnishings, at least 1 metre from the heater. When in use keep the mains cord of the heater from touching the heater body. Do not drape the cord over the heater while hot.. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.
3. Always unplug heater when not in use.
4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to suitably qualified facility for examination, electrical or mechanical adjustment or repair.
5. Do not use outdoors, the product is designed only for household use.
6. Never locate heater where it may fall into a bathtub or other water container.
7. Do not run cord under carpeting. Do not cover cord with throw rugs runners, or the like. Keep cord away from traffic areas to avoid tripping over.
8. To disconnect heater, turn controls to off, then remove plug from outlet.
9. Connect to properly earthed socket-outlet of the appropriate voltage.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block the grilles in any manner.
12. Do not use in areas where petrol, paint, or flammable liquids are used or stored.
13. Use the heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.
14. Do not connect via double adapters or power boards. Avoid the use of an extension cord because the extension cord may overheat and cause risk of fire. However, if this heater is used with an extension cord, use as short a cord as practical.
15. Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
16. In order to avoid overheating, do not cover the heater.
17. There are no user serviceable parts installed in the unit.
18. Young children should be supervised to ensure that they do not play with the appliance.
19. Keep these instructions handy for future reference.

Caution

This heater is to be operated only in upright position.

The heater incorporates a tip over switch.

If the unit is tilted or knocked over the power will be cut off automatically.

When the heater is put back to the right upside position, it will start working as normal again.

When the heater is not in use, store in a cool dry location.

Do not store until the heater cools down.

Warning

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The heater must not be located immediately below a power outlet.

Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.

ASSEMBLY

The heater must always be used with feet assembled and in upright position. Attach the feet to the heater body as given in figure 1.

1. Make sure the heater is switched off and is unplugged from the mains socket.
2. Place the heater on a flat surface or upside down. (Control knobs near to the ground)
3. Unscrew the feet fixing screws attached to the base of the heater.
4. Locate the feet in position, make sure the mounting holes on the feet and the heater body align.
5. Fasten the feet fixing screw to secure the feet in position. The heater is now ready for use.

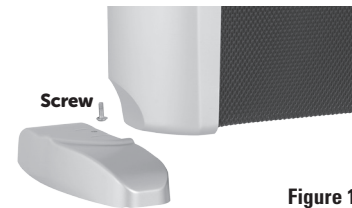


Figure 1.

Control Panel

Power Control Knob:

1. With the power control switch in position '0' the heater is OFF.
2. When the switch is at position '1' the heater will run at low heat setting 750W, the led corresponding to low heat setting will glow.
3. When the switch is at position '2' the heater will run at medium heat setting 1250W, the led corresponding to medium heat setting will glow.
4. When the switch is at position '3' the heater will run at high heat setting 2000W, the led corresponding to high heat setting will glow.

Thermostat Control

The rotary knob is to regulate the heat in order to maintain a desired temperature. When the room temperature setting is lower than the temperature setting on the knob, the heater will function and heat up the room until the desired temperature is attained. When the ambient temperature reaches the set temperature, the heater will be turned off automatically. Turn the knob further clockwise for higher heat setting.

OPERATION

Caution: There may be some odour coming from the heater for the very first time you use it. This is normal during the break-in period or after long term storage. Make sure the heater is in well ventilated area and continue running it until the smell goes away.

1. Set the power control switch to off position.
2. Plug the heater into a 10Amp wall socket.
3. Ensure heater is on a flat stable surface.

If on a carpet ensure that the carpet pile does not obstruct the air vents on the underside of the body or cause the tip over switch to operate inadvertently.

4. Set power knob to desired position for Low, Medium or High heat setting. Turn the thermostat control knob clockwise until the heater is ON.

The power on light for respective heat setting on the front of the heater body will illuminate.

Slowly turn the thermostat control knob anticlockwise until the heater shuts OFF.

The heater will automatically maintain this temperature.

For a lower temperature turn the knob further anti-clockwise.

For a higher temperature turn the knob clockwise.

Caution

This heater is to be operated only in upright position. The heater incorporates a tip over switch. If the unit is tilted or knocked over the power will be cut off automatically. When the heater is put back to the right upside position, it will start working as normal again.

